



3300 SERIES VolP SIP 2017 USER GUIDE

3300IP MWB, 3300IP MWD5, 3300IP MWD, 3302IP MWD5, 3302IP MWD, 3300TRM-IP, 3302TRM-IP

Table of Contents

3300 Series VoIP Phone Map	3
3300 Series VoIP Trimline Phone Map	4
Quick Start	5
Function	5
Standards and Protocols	6
1. Introduction	6
1.1 Overview of Hardware	6
1.1.1 Base Unit	6
1.1.2 DECT Handset	6
1.2 Overview of Software	7
1.2.1 Configuration Methods	7
1.2.2 Specs Overview	7
1.3 Understanding Buttons and Hardware	7
2. Operating Method for Dialing	9
2.1 How to Dial a Phone	9
2.1.1 Basic Call	9
2.1.2 Hold and Resume	9
2.1.3 Volume Control 1	0
2.1.4 Mute 1	0
2.1.5 Multi-Function Memory Keys 1	0
2.1.6 Three-Way Conversation 1	0
2.1.7 Transfer 1	0
2.1.8 Call Park 1	0
2.1.9 Redial 1	0
2.1.10 Register Handset	U 1
2.1.11 Delete Handset	I
2.1.12 Switch between Base	1
	I
and Line 2	1
2 1 14 Base Phone and Cordless	'
Handset Can Maintain Independent	
Conversations	1
3. Web Interface Settings	1
3.1 Home Page—Summary of Network	•
Parameters	1
	-

3.2 Network Settings	12
3.2.1 WAN Settings	12
3.2.2 Basic Settings	12
3.2.3 DHCP	12
3.2.4 Static IP Settings	12
3.2.5 PPPOE Settings (Point to Point	
Protocol over Ethernet)	12
3.2.6 802.1X Settings	12
3.2.7 LLDP Settings	13
3.2.8 LAN Settings	13
3.3 VoIP Settings	13
3.3.1 Primary Register	13
3.3.2 Audio Settings	14
3.3.3 Call Features	15
3.3.4 Dialing Rules	16
3.3.5 Multicast Paging	17
3.3.6 Advanced Settings	17
3.4 QoS Settings (Quality of Service)/	
Virtual LAN (VLAN)	18
3.5 Provisioning	18
3.5.1 Provisioning Options	18
3.5.2 Provisioning Server Settings	19
3.5.3 AutoUpdate Settings	19
3.5.4 WebUI Management	20
3.6 System Settings	20
3.6.1 Logging Server	20
3.6.2 Time Settings	20
3.6.3 User Management	21
3.6.4 System Actions	21
3.6.5 DECT—Digital Enhanced Cordless	
Telecommunications	21
4. Tech Notes	22
4.1 LLDP—Tech Notes	22
4.2 802.1x—Tech Notes	23
4.3 DHCP Options—Tech Notes	23
4.4 QuickKey DialPad Shortcuts	24
Important Safety Instructions	26
	-

3300 Series VolP Phone Map



BASE FEATURES AND CONTROLS

- 1. Handset
- 2. LCD display
- 3. Paper faceplate/Plastic overlay
- 4. Up to 2 rows of 0, 5, or 10 Memory keys
- 5. Dial pad
- 6. Redial key
- 7. Volume \blacktriangle (increase) and Volume \blacktriangledown (decrease) keys
- 8. 2-line only: Conference key
- 1-line: Row with Hold, Mute, and Speaker keys
 2-line: Row with Hold, Line 1, Line 2, Mute, and Speaker keys
- 10. Message Waiting Indicator (MWI) light

3300 Trimline VoIP Phone Map



BASE FEATURES AND CONTROLS

- 1. Handset
- 2. LCD display
- 3. Dial pad
- 4. 1-line: Row with Redial, Up, Down, and Hold keys 2-line: Row with Line 1/Redial, Up, Down, and Line 2/Hold keys
- 5. Message Waiting Indicator (MWI) light

Quick Start

Cetis' next generation of SIP phones has several deployment options available through the network. All of them require the download and application of a configuration file with all the necessary parameters in place to navigate their network and register to a SIP PBX/server. The recommended method of starting is to use the provided tools to create uniform configuration files, as each phone endpoint does require a unique configuration file to operate correctly. The configuration file is the sum of all of the parameters found in the web interface of the phone and constitutes its complete programming information. By using the Mass Configuration utility tools, you can ensure that the substitution of values is not subject to human error that may happen when programming several hundred phones by hand.

The initial step in creating a template configuration file is to program the phone via web interface for your network and then export that file from within the web interface. To start programming the phone, power the phone with PoE into the WAN port of the phone. When you first hear the "doodle-doodle" configID tone you do not want to download a config file; instead, press # directly to enter into the default standby status. After the phone enters into the default standby status, press **47# (** I P #) on the keypad to make the phone recite and/or display its own IP address. With that IP address, you may log in and check the existing configuration or begin programming the phone through the web interface. Once programmed and tested in the local environment, export that config file and use it as a template configuration file in the Mass Configuration tool.

For Cloud-based systems installers, there is a new zero-touch method of deployment that employs a re-direction server, allowing the installer to simply place a phone on the network, where the phone will attempt to reach an address of https://provision.cetis.com during its bootup process. At that address, the installer will have an account with a list of their phones' valid MAC addresses, and an URL for another server where the phones' configuration files reside. The phone will then go to that re-directed address and download the configuration file of <macaddress>.cetis.cfg and apply it. The phone is then configured.

Alternatively, as the phone boots-up, it will by default be configured to enable LLDP and DHCP. This will help to navigate the network to the proper VLAN and obtain its IP address as well as the Provisioning Server's IP address through a DHCP Server (DHCP Options 60/43 or 66). The phone will either download its config file as <macaddress>.cetis.cfg or, if that file is not found, the phone will produce a audio prompt ("doodledoodle") tone as well as flashing lights to prompt the user to enter a "Config ID".

After inputting the ConfigID through the numeric keyboard and ending with #, the phone will download the configuration file named <ConfigID>.cetis.cfg from the Provisioning Server. If the download is successful, the phone will apply the configuration and re-boot. If it failed—no file found or no server configured—the phone will boot with default settings.

Function

- Support DHCP assigns IP address, etc., automatically
- Support PPPoE (used while connecting ADSL, cable modem)
- 3. Firmware and configuration can be updated via HTTP, HTTPS, FTP, and TFTP
- 4. Hold function
- 5. Speed-dial
- 6. DND (Do not disturb), black list, hotline function

- 7. Voicemail message
- 8. Configurable via common browsers
- 9. Remote management function
- Classification management for common user's password and super-user's password
- 11. Support **codes function
- 12. Call waiting
- 13. Auto answer
- 14. Call park
- 15. Call transfer
- 16. Three-way conference
- 17. 802.1x authentication
- 18. LLDP feature

Standards and Protocols

- IEEE 802.3 /802.3 u 10 Base T / 100Base TX
- PPPoE
- DHCP Client and Server
- Support G.711a/u,G729, G723.1 Audio Codec
- SIP RFC3261
- TCP/IP: Internet Transfer and Control Protocol
- RTP: Real-Time Transport Protocol
- VAD Save Bandwidth
- TFTP: Trivial File Transfer Protocol
- 802.3af POE

1. Introduction

This Cetis SIP endpoint device is SIP 2.0 compliant with RFC 3261, and some configuration is necessary before using the phone. The base is connected via networking cable and powered via 802.3af PoE (Power over Ethernet). If the endpoint is a cordless set, the handset is a DECT radio device that synchronizes to the base. If the set is a corded device, the handset coil cord is simply plugged into the proper port on the base. This manual will illustrate how to setup the phone through the keypad and web interface.

1.1 Overview of Hardware

1.1.1 BASE UNIT

The base unit has a WAN interface and LAN interface for a total of two network ports. The default WAN interface is a DHCP Client. The user will connect the WAN interface to a PoE switch to obtain power and an IP address, and connect the LAN interface to a computer to bridge the network or configure virtual LAN networks. The administrator username "admin" and password "admin" is used to login and configure the set via HTTP web browser access. Only the WAN interface supports 802.3af Power Over Ethernet. The LAN port can be setup to mirror the WAN port for diagnostic troubleshooting or disabled entirely.

1.1.2 DECT HANDSET

The DECT handset is automatically synchronized to the base and operates at 1.9 GHz in North America and 1.8 GHz in many parts of Europe. The handsets auto-negotiate with the base through the charging leads on the base/cradle for seamless, secure cordless communications. Setting the handset (with connected battery) into the cradle (when powered by PoE) will synchronize the handset to the base.

1.2 Overview of Software 1.2.1 CONFIGURATION METHODS

3.x firmware configuration and firmware updates can be controlled by:

- Using a web browser to setup configuration and update the firmware. Press the key strokes **47# (** I P) #, and the phone will announce its IP address from the audio speaker. Input this IP address directly into the browser address field to reach the login page of the phone. The default username/password is admin/admin.
- Downloading configuration files from a provisioning server. Create configuration file for the phone(s), and place it on the provisioning server. Ensure provisioning server is reachable by phone.

1.2.2 SPECS OVERVIEW

Network Protocol

- SIP v2(RFC3261)
- IP/TCP/UDP/RTP
- IP/ICMP/ARP/RARP/SNTP
- TFTP Client/DHCP Client/PPPOE Client
- SSH/HTTP Server
- DNS Clients

Codec

- G.711a
- G.711u:
- G.723.1:
- G.729
- G.722

Voice Quality

- VAD: Voice Activity Detection
- AGC: Automatic Gain Control
- AEC: Automatic Echo Cancellation
- SRTP: Secure Real-Time Transport Protocol

Call Function

Call Waiting

- Call Hold
- Call ForwardCaller ID

DTMF • IN Band • SIP Info • RFC2833 Tone • Dial Tone • Ring Tone Ring Back Tone • Busy Tone Phone Function • Volume Adjustment • Speed Dial Key **IP** Assignment • IP (Static IP) • DHCP PPPoE Security • HTTP 1.1 Basic/Digest Authentication for Web Setup MD5 for SIP Authentication (RFC2069/RFC2617) SRTP/TLS for Secure Conversation • HTTPS for Secure Provisioning QoS QoS Field NAT Traversal STUN Configuration Web Browser • Via Config File Keypad SIP Server • Support two SIP servers working at the same time Provide a backup SIP server Firmware Upgrade • TFTP • FTP • HTTP • HTTPS

1.3 Understanding Buttons and Hardware

You can use the tables that follow to identify the buttons and hardware on your phone.

Base Keys Functions

Keys	Mode	Function/Display	
Volume +	Calling Increase volume		
	Config	Choose page (page up)	
Volume -	Calling	Reduce volume	
	Config	Choose page (page down)	

Keys	Mode	Function/Display
Message	Dialing	Pick up the voicemail
		message
Line 1	Hook-on	Pick up
	Talking	Hold or resume
Line 2	Hook-on	Pick up
	Talking	Hold or resume
Page	Hook-on	Press to call handset;
		press this key for 3 s to
		register handset
Speaker	Talking	Between the handset
		and speaker switches
Mute	Talking	Mute function
Redial	Dialing	Redial the last number
		and make a call
Hold	Calling	Hold or resume or park
		key
M1~M7	Dialing	7 speed dial numbers or
		the second function
Menu	On-hook	Press this key to store
		number; press this for
		3 s to enter the phone
		menu
	Config	Confirm/enter to the
		next sub-menu
Enter	Config	Exit /return to the first
		menu
1	Dialing	"1"
	Config	"1", "space", "@", "_",
		"-", "/", "%"
2	Dialing	"2"
	Config	"2", "a", "b", "c", "A", "B",
		"C"
3	Dialing	"3"
	Config	"3", "d", "e", "f", "D", "E",
		"F"
4	Dialing	"4"
	Config	"4", "g", "h", "l", "G", "H",
		" "
5	Dialing	"5"
	Config	"5", "j", "k", "l", "J", "K",
		"Ľ"

Keys	Mode	Function/Display
6	Dialing	"6"
	Config	"6", "m", "n", "o", "M",
		"N", "O"
7	Dialing	"7"
	Config	"7", "p", "q", "r", "s", "P",
		"Q", "R", "S"
8	Dialing	"8"
	Config	"8", "t", "u", "v", "T", "U",
		"V"
9	Dialing	"9"
	Config	"9", "w", "x", "y", "z",
		"W", "X", "Y", "Z"
0	Dialing	"0"
	Config	"0", "*", "#", "\$", "&",
		"?", "!", "<", ">"
*	Dialing	"*"
	Config	"*""" ,·
#	Dialing	Dial as the first number
		or finish number sign

Handset Keys Functions

Keys	Mode	Function/Display
Volume +	Talking	Increase receiver volume
	Hook-on	Increase ringer volume
Volume -	Talking	Reduce receiver volume
	Hook-on	Choose ringer volume
Line 1	Hook-on	Pick up
ON/OFF	Talking	Hold or resume
Line 2	Hook-on	Pick up
ON/OFF	Talking	Hold or resume
Redial	Dialing	Redial the last number
		and make a call
Hold/	Calling	Hold or resume or
Conf		conference
FNC	Talking	Call transfer
	Hook-on	Press for 5 s to adjust
		the incoming call ringer
		types, use the number
		keys 1-6 to choose ringer
		type

Keys	Mode	Function/Display
1	Dialing	"1"or press for 3 s
		to pick up voicemail
		message
	Config	"1", "space", "@", "_",
		"-", "/", "%"
2	Dialing	"2"
	Config	"2", "a", "b", "c", "A", "B",
		"C"
3	Dialing	"3"
	Config	"3", "d", "e", "f", "D", "E",
		"F"
4	Dialing	"4"
	Config	"4", "g", "h", "l", "G", "H",
		" " "
5	Dialing	"5"
	Config	"5", "j", "k", "l", "J", "K",
		""
6	Dialing	"6"
	Config	"6", "m", "n", "o", "M",
		N [*] , U [*]
7	Dialing	·/·
	Config	'/", p", q", r", s", P", "0" "D" "C"
		Ч, К, S "o"
8	Dialing	8 "o" "·" " " " " " "
	Config	8°, t, u°, v°, 1°, 0°, ""
0	Dialina	V "0"
9		У "o"""""""""
	Config	Υ, W, X, Y, Z, "\\/" "\/" "\/" "¬"
0	Dialina	ΨΨ, Χ, Υ, Ζ "o"
U		ሀ "ርን" "*" "#" "ሶ" "ና"
	Config	∪ , `, Ħ , ֆ , Ҩ , "ɔ" "」" "」" "、"
*	Dialing	:, !, <, > "*"
	Config	"*"""
#	Dialina	Dial as the first number
#	Diating	or finish number sign
		or mish number sign

2. Operating Method for Dialing

2.1 How to Dial a Phone

You can place calls after the phone is successfully registered to a SIP server/IP-PBX. Please confirm that all cables for power and network connectivity are correct.

2.1.1 BASIC CALL

- Place a call using the handset: Line 1/Line 2 is in off-hook status, dial a number, and then dial # as the ending character after the last digit to immediately send the digits to the SIP server.
- Place a call using the speakerphone: The phone has an active keypad. That means pressing a number on the dial-pad will take Line 1 off-hook: dial the number and then dial # as the ending character after the last digit to immediately send the digits to the SIP server.

2.1.2 HOLD AND RESUME

 You can hold and resume calls. Only one call can be active at any given time on a corded phone; all other connected calls must be placed on hold. Two-line cordless phones can have up to two active conversations.

1) Put a call on hold

Make sure the call you want to put on Hold is enabled, then press the Hold key.

2) Resume a call from hold

Make sure the appropriate call is enabled, then press the Hold key or press the Line 1 or Line 2 key to resume the call on whichever line was on Hold.

2. Call Park feature

Enable Call Park feature and the Hold key can be used as a Park key (see below).

2.1.3 VOLUME CONTROL

Press VOL+ to increase the volume and press VOL- to decrease.

2.1.4 MUTE

If you do not want the called party to hear your end of the line, press the Mute key; they will not hear your conversation or background noise. You will still hear their conversation. This is often used while in conference calls.

2.1.5 MULTI-FUNCTION MEMORY KEYS

The speed dial memory keys have multiple modes of operation. They may also be used as hold, DND, transfer, and conference functions. See the web settings of the call feature function.

Home • VoIP Sett	ings • Call Features	
Call Features		
Programmable Keys &	MWI Number	
Memory 1:	Memory 🗢	
Memory 2:	Memory Hold	
Memory 3:	Conference	
Memory 4:	Transfer DND	
Memory 5:	Multicast Paging	

2.1.6 THREE-WAY CONVERSATION

If Line 1 is holding and Line 2 is talking on an active call, initiate a conference call by pressing the conference key connecting all three parties. When the phone is in three-way conference, the user cannot switch between base and handsets.

2.1.7 TRANSFER

The phone is capable of blind and attendant transfers. For example:

Blind Transfer—User A is conversing with user B. A wants to transfer the call conversation with B to user C. User A would press the Transfer key (a speed dial programmed with transfer function) and call user C. Press the Transfer key again to leave the call and finalize the transfer function to connect user B with user C. Attended Transfer—User A is conversing with user B. A wants to transfer the call conversation with B to user C. User A would press the Transfer key (a speed dial programmed with transfer function) and call user C. After the call between user A and user C is connected, user A would hang up to leave the call and finalize the transfer function to connect user B with user C.

2.1.8 CALL PARK

The Hold key can be configured to utilize a Call Park function. Call Park is essentially sending an active call to a place holder on the server where someone else can then retrieve the call from its "parking spot." Many PBXs have a Call Park and Call Retrieval special feature code.

Park is programmed in the phone under Call Features > Programmable Keys and MWI Number section. Set Park Mode: to Park | Hold Key Active: The parking place code or pilot number | Hold Key Idle: The retrieval from parking place code.

2.1.9 **REDIAL**

Press the Redial key to dial the last number called. By default, the last number dialed will be erased after 60 minutes to protect guest privacy. This time is configurable under Dialing Rules > Dialing Rules Configuration from 0~60.

2.1.10 REGISTER HANDSET

The handset on the IP DECT phone is essentially a radio, and can register to the base in two ways: manual registration and automatic registration.

Manual Registration: While on-hook, press the Page key on the base unit for three seconds to begin the handset registration mode. The Message indicator light will begin to flash. Press the * key for 3 seconds to register the handset, then you will hear a confirmation tone indicating a successful registration.

Automatic registration: Place the handset in the cradle of the base. The Message light begins to

flash, indicating the handset is in register mode; the ON/OFF light on the handset flashes at the same time. If the handset registers successfully to the base, then the Message light on the base and the ON/OFF light on the handset will stop flickering and will give the prompt tone for a successful registration.

Note: Each base phone can register up to 5 handsets.

2.1.11 DELETE HANDSET

Hold down the page key until the MWI light starts blinking, then release the page key and press it 7 times. After this the MWI light should start blinking rapidly. After the page light as stopped blinking rapidly, all handset registrations should be deleted.

2.1.12 SWITCH BETWEEN BASE AND HANDSET

When a call is active on the base phone, press the Line 1 or Line 2 handset key and the handset will pick up the active call. If a call is active on the handset, press the Line 1 or Line 2 key on the base to switch the conversation to the base.

2.1.13 SWITCH BETWEEN LINE 1 AND LINE 2

When Line 1 is on Hold and Line 2 is active, press the Line 1 key, and Line 1 will no longer be on Hold—Line 2 is now on Hold. If Line 2 is on Hold and Line 1 is active, press the Line 2 key for Line 2 to resume and for Line 1 to be placed on Hold.

2.1.14 BASE PHONE AND CORDLESS HANDSET CAN MAINTAIN INDEPENDENT CONVERSATIONS

The base phone and the cordless handset can maintain conversations independently, with true two-line functionality. For example, Line 1 can place a call from the base phone to one phone destination while Line 2 from the cordless handset can be active to a separate destination.

3. Web Interface Settings

Connect both the phone and your PC on the same LAN (Local Area Network), open the browser and enter the IP address of the phone. The browser will ask you to enter the username and password. Please enter the username and password as to login. Default username and password are admin/admin.

lease enter yo	ur User name and Password below to logi
sornamo	
sername	
assword	

3.1 Home Page—Summary of Network Parameters

After entering the username and password, the following screen is displayed:



3.2 Network Settings

You can get your network information from this page:



3.2.1 WAN SETTINGS

WAN port network settings page can be used to configure network access settings. Some vendors call it the network port. This port is used to power (POE) and connect the phone to the network. Supports static IP, DHCP (to obtain dynamic IP address), and PPPoE.

Home • Network Settings	WAN Settings
WAN Settings	
WAN Interface: Connected	
Basic Settings	
Network Mode	DHCP Fixed PPPoE
Link Mode	AUTO 🗢
Primary DNS	8.8.8.8
Secondary DNS	8.8.4.4
Static IP Settings (Required if Netwo	ork Mode is set to Static IP)
Static IP Address	192.168.1.100
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
PPPoE Settings (Required if Network	k Mode is set to PPPoE)
User Account	
Password	
802.1X Settings	
802.1X	Disable 🗘
User Name	
Password	
Туре	multicast 🗘
LLDP Settings	
LLDP	Enable ᅌ
Packet Interval	120
	Apply Cancel

3.2.2 BASIC SETTINGS

Basic Settings	
Network Mode	DHCP Fixed PPPoE
Link Mode	AUTO
Primary DNS	8.8.8.8
Secondary DNS	8.8.4.4

Basic Setting

Network Mode	Select WAN port network
	mode. Default is DHCP.
Link Mode	Auto is default.
Primary DNS	Set the primary DNS IP
	address.
Secondary DNS	Set the secondary DNS IP
	address.

3.2.3 DHCP

If there is a DHCP server in your local network, the phone will automatically obtain WAN port network information from your DHCP server.

3.2.4 STATIC IP SETTINGS

If you wish to set the phone to a static IP address, configure the IP address, subnet mask, and gateway here. DNS servers configured under Basic Settings will be used.

Static IP Settings (Required if Network Mode is set to Static IP)			
Static IP Address	192.168.1.100		
Subnet Mask	255.255.255.0		
Default Gateway	192.168.1.1		

Static IP Setting (Required if Network Mode Is Set to Static IP)

Static IP Address	Set static IP address.
Subnet Mask	Set network mask of static
	IP.
Default Gateway	Set default gateway IP
	address of static IP.

3.2.5 PPPOE SETTINGS (POINT TO POINT PROTOCOL OVER ETHERNET)

PPPoE Settings (Required if Network Mode is set to PPPoE)

User Account Password

PPPoE Setting (Required if Network Mode Is Set to PPPoE)

User Account	Set your PPPoE user	
	account.	
Password	Set the password of your	
	PPPoE account.	

3.2.6 802.1X SETTINGS

802.1x Settings

802.1X Settings	
802.1X	Enable
User Name	
Password	
Туре	multicast ᅌ

802.1x_Enable	Enable or disable 802.1x
	authentication.
802.1x_UserName	802.1x User name.

802.1x_Password	802.1x Authentication
	password.
802.1x_Type	Multicast (default) or
	Broadcast.

3.2.7 LLDP SETTINGS

LLDP Settings

LLDP Settings	
LLDP	Enable ᅌ
Packet Interval	120
LLDP Enable	Enable or disable LLDP
	feature.
Packet Interval	120 (default).

LLDP-MED (Link Layer Discovery Protocol-Media Endpoit Discovery) is a vendor-neutral link layer protocol in the Internet Protocol Suite used by network devices for advertising their identity, capabilities, and neighbors on an IEEE 802 local area network, principally wired Ethernet. LLDP-MED is enabled by default on the phone and is used to help the phone navigate to the correct VLAN. If properly configured on the L2 switch, the phone should arrive on the VLAN segment it is directed to. Once on the correct VLAN, the phone will try to obtain an IP address via DHCP.

3.2.8 LAN SETTINGS

The LAN port is used to provide network connectivity to guest ethernet devices such as laptops. It has several modes of operation:

- WAN/LAN Mirror—All WAN traffic is mirrored to the LAN port. This can be used for diagnostic troubleshooting of the phones connection by plugging in a capture device such as a laptop with Wireshark into the LAN port.
- Bridge—LAN traffic is passed-through the WAN port unaltered (unless QoS settings are specified, see appropriate section) to the access switch.
- NAT—The WAN port address is used to translate IP connections of devices that are connected to the WAN.

• Disable—LAN port can not be used to connect ethernet devices to the network.

Home	Network Settings	LAN Settings
LAN Setti	ings	
LAN Setting	js	
Lir	nk Mode	AUTO ᅌ
W	AN/LAN Mirror Enable	Disable 🗘
LA	AN Port Mode	○NAT O Bridge ○Disable

If NAT is selected/enabled, you may use the phone as a DHCP server as well. This is not a feature often used in the intended hotel guestroom setting. More often the LAN is left as bridge, and additional QoS/VLAN settings are applied to separate Data (LAN) and Voice (WAN) traffic. Please see QoS settings.

NAT	
IP Address	192.168.10.1
Subnet Mask	255.255.255.0
DHCP Server	Enable ᅌ
IP Pool Start	10
IP Pool End	100
MAX Leases	10 (1~250 leases)
DNS Relay	Enable ᅌ
	Apply Cancel

3.3 VoIP Settings

You can get your SIP account information and registration status from this page.

Home	VoIP Settings		
VolP S	VolP Summary		
Primary	Register: Registered		
	User Name: 3001	Domain Realm:	
	Register Server: 10.40.0.40	Outbound Proxy:	
	Register Server Port: 5060	Outbound Proxy Port:	
	SIP Backup Register Status: None		
	SIP Backup Server:		
	SIP Backup Type: None		
Other			
	NAT Traversal(STUN): Disabled	STUN Sever Address:	

3.3.1 PRIMARY REGISTER

You set up your SIP account on this page. These are the minimum required variables to enable the phone on a SIP PBX server.

Home	 VoIP Settings 	Primary Register	
Primary	/ Register		
Main Sei	ver: Registered	Backup Server: Not	configured
Register	Server		
	Use Service	Enable ᅌ	
	Display Name	3001	
	User Name	3001	
	Authorization User Name	3001	
	Password		
	Register Server Port	5060	
	Register Server Address	10.40.0.40	
	Domain Realm		
	Outbound proxy		
	Register Expire	300	
	SIP Backup Type	None ᅌ	
	SIP Backup Server		



Register

Register Server		
Use Service	Enable or disable this SIP	
	account. Default is Disabled.	
Display Name	Set display name of your SIP	
	account.	
User Name	Set user name (SIP account	
	number).	
Authorization	Set authorization user name of	
User Name	your SIP account.	
Password	Set password of your SIP	
	account.	
Register	Set register server's port	
Server Port	number. Default is 5060.	
Register	Set register server's IP	
Server	address or domain name.	
Address		
Domain	Set server authentication	
Realm	realm.	
Outbound	Set if your service provider has	
Proxy	different proxy server from	
	register server. Most of the	
	service providers use the same	
	address for both servers.	
Register	Set register expire time. The	
Expire	unit is a second. Default is 300.	
SIP Backup	Set the operation of the	
Туре	Backup SIP server	
SIP Backup	Set the IP address of the	
Server	Backup SIP server	

Protocol Control		
MWI	Set Disable/Enable message	
Subscribe	waiting through pull-down	
	menu, including:	
	Disable: MWI is disabled, even	
	if received NOTIFY message	
	from the server indicating	
	new voicemail, phone will not	
	prompt.	
	Enable (Subscribe): MWI is	
	enabled and SUBSCRIBE will	
	be sent, if the server sends	
	NOTIFY message indicating	
	new voicemail received, MWI	
	LED will blink to prompt.	
	Enable (No Subscribe): MWI	
	is enabled, but phone will	
	not send SUBSCRIBE, if the	
	server sends NOTIFY message	
	indicating new voicemail	
	received, MWI LED will also	
	blink to prompt.	
Subscribe	Set subscribe expire time. The	
Expire	unit is a second. Default is 300.	
Local SIP Port	Set the port to send receive	
	SIP packets (when transport is	
	UDP). Default is 5060.	
DTMF	Select DTMF mode. Choices	
	can include RFC2833, In	
	Band, and SIP Info. Default is	
	RFC2833.	
Anonymous	Set to reject anonymous calls.	
Call Rejection	Default is OFF.	
PRACK	Enable or disable PRACK.	
Rport	Open or close the rport	
	mechanism.	
Transport	UDP/TCP transmission mode.	

3.3.2 AUDIO SETTINGS

You can adjust sound and volume settings, set codecs and ring types and international signal standards on this page.

Home	 VoIP Settings 	Audio Settings
Audio	Settings	
Sound a	and Volume Control	
	Handset	5 (1~7)
	Speaker	2 (1~7)
	Ringer Tone	5 (1~7)
	Signal Standard	United States
	Ringer	🔿 Off 💿 On
	Ringer Type	ringer 1 📀
Codecs	Settings	
	Codec Priority 1	G.711u ᅌ
	Codec Priority 2	G.723.1
	Codec Priority 3	G.729 🗘
	Codec Priority 4	G.711a 🗘
	Codec Priority 5	iLBC 🗘
	Codec Priority 6	G.722
	Packet Data Size	20 ms ᅌ
	iLBC 15.2K	Off ◯ On
	G.723.1 5.3K	Off ◯ On
Voice V	AD/CNG	
	Voice VAD	Off ◯ On
	CNG	Off ◯ On
Codec I	D Settings	
	RFC2833 ID	101 (95~127)
		Apply Cancel

Audio Settings

Sound and Volume Control		
Handset	Set output volume of handset.	
	Ranges from 1–7. Default is 5.	
Speaker	Set output volume of speaker.	
	Ranges from 1–7. Default is 5.	
Ring Tone	Set volume of ring tone. Ranges	
	from 1–5. Default is 5.	
Ringer	Turn Ringer off or on.	
Ringer Type	Select ringer type.	
Codec Setting		
Codec #1-6:	Prioritize the codec selections,	
	there are six choices:	
	• G.711a	
	• G.711u	
	• G.729	
	• G.723.1	
	• G.722	
	• iLBC	
Packet Data	Size of the RTP packet size.	
Size	Default is 20 ms.	
Voice VAD/CNG		
VAD	Enable or disable Voice Activated	
	Detector function. VAD can reduce	
	RTP data to not send silence	
	packet. Default is Enabled.	
CNG	Enable or disable Comfort	
	Noise Generation when silence	
	is detected in the conversation.	

Codec ID Settings			
DTMF	Set the default DTMF payload		
Payload	ID.		
(RFC2833)			

3.3.3 CALL FEATURES

You can set call features, program Speed Dial button functions and Message Waiting Indication buttons, as well as create blocked and/or restricted lists on this page.

Home • VoIP Settings	Call Features	
Call Features		
Programmable Keys & MWI	Number	
Memory 1:	Memory 🗢	<u>ا</u>
Memory 2:	Hold	
Memory 3:	Conference Transfer	
Memory 4:	DND	
Memory 5:	Wentery	
Memory 6:	Memory ᅌ	
Memory 7:	Memory ᅌ	
Memory 8:	Memory ᅌ	
Memory 9:	Memory ᅌ	
Memory 10:	Memory ᅌ	
MWI Number:		
Park Mode	Default 💲	
Hold Key Active:		
Hold Key Idle:		
Call Features		
Hotline		
Warm Line Time	4 (0~30 sec)	
Auto Answer	Off ◯ On	
Auto Answer Time	Out 5 (0~30 sec)	
Forward Type	Disable	
Forward Number		
No Answer Time C		
Call Waiting		
Do Not Disturb	Off On	
Ban Outgoing	Off ○On	
Accept Any Call		
	Apply Cancel	
Blocked List Set		
Position Number	r	Select
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
Delete Selected Dele	ete All Cancel	
Add New))	
Number:)	
Add Cancel		

Call Features

Programmable Keys & MWI Number		
Mem1–	1. Input speed dial number. OR	
Mem10	2. Configure the second feature:	
	Every memory key can be set as a	
	feature key to hold, DND, transfer,	
	or initiate a conference.	
MWI	Input voice mail number.	
Number		
Park	Enable or disable the Call Park	
Mode	feature	
Hold Key	Configure the number of the Park	
Active	key. In Park mode, if a call is active	
	on either line, press the Hold key	
	to actively call the parking slot	
	number. This is a feature to place a	
	call into a parking slot on the PBX if	
	the PBX is capable of that feature.	
Hold Key	Configure the number of the	
Idle	Park key. In Park mode, if no call	
	is active and a line is available,	
	execute Idle by pressing the Hold	
	key. Hold will call the programmed	
	number (usually to retrieve a call in	
	a parked state).	
Hotline	Program a hotline number for	
Number	immediate dialing when off-hook.	
Warm	Set waiting time for the user	
Line	picking up the phone to dial hotline	
Time	number. The range is 0–30 s;	
	default is 4 s.	
	If warm line time is 0 s, then	
	hotline number will be sent right	
	away after off-hook.	
	If the range is 1–30 s and using 3 s	
	as an example, the hotline number	
	will be sent 3 s later automatically	
	without pressing any key.	
	As long as any key is pressed within	
	that setting time, the timer will be	
	suspended and the hotline call will	
	fail.	

Forward	Select the type of call forward:
Туре	Default is Disable.
	Disable: Disable call forward.
	All Forward: The caller is always
	forwarded to the appointed phone.
	Busy Forward: If the phone is busy, it
	will forward to the appointed phone.
	No Answer Forward: If no answer,
	it will forward to the appointed
	phone.
Forward	Call the forwarded phone number.
Number	
Enable	Enable or disable no answer time
Call Time	out. Default is enabled.
Out	
No	No answer call forward time
Answer	setting. Default value is 20 s.
Time Out	
Call	Enable/disable Call Waiting.
Waiting	
Do Not	Enable this option to refuse any
Disturb	calls.
Ban	Enable or disable outgoing calls.
0	Default is OFF

In the Blocked List section of the web page, click ADD to add a blacklisted number from which you do not want to receive calls:

Diocked List C		Output
Position	Number	Select
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
Delete Sele	cted Delete All Cancel	
Add New		
Position:	(1~10)	
Number:		
Add	Canad	

3.3.4 DIALING RULES

You can manage your dial rules on this page. You can remove the option of sending digits immediately by pressing the # key. It is also possible to set the timeout from when the user stops dialing until the digits transmit to the server (between 1 and 9 seconds).

Home	 VoIP Settings 	Dialing Rules	
Dialing	Rules		
Dialing R	ules Configuration		
	End With #	🔿 No 💽 Yes	
	Clear Redial In 60 Minute	s Off On	
	Auto Dial Switch		
	Auto Dial Time	5 (1~30 sec)	
		Apply Cancel	
User Defi	ne Rules		
Position	Rule		Select
1	Зххх		
2			
3			
5			
4			
5			
6			
7			
8			
9			
10			
Delete	Selected Delete All	Cancel	
Add Digita	I Map Rule		
Position:	1 (1~10)		
Rule:	Зххх		
Add	Cancel		

Digital Map Configuration

Field Name	Description	
Dialing Rules	Set dial ending rule. There are	
Configuration	three kind of rules:	
	• End with "#".	
	• Erase Redial memory (default	
	is 60 s)—This is a guestroom	
	security feature.	
	• Auto Dial time is a timeout:	
	Set dial ending waiting time	
	in seconds. The default	
	timeout is 5 seconds.	
User Defined	Define your dial ending rule by	
Rules	prefix number and length. In the	
	example shown: 3xxx will cause	
	every 4 digit number dialed,	
	starting with a 3 to immediately	
	dial without the 5 second timeout.	
	So dialing 3004 would immediately	
	send those digits to the SIP PBX	
	and dial without a delay.	

3.3.5 MULTICAST PAGING

Multicast paging allows the phone to receive paging as defined in the listening address from an audio source on the network and is a useful safety feature in case of emergencies or for nonsafety related notifications.

Multicast Pa	aging		
Multicast Pagi	ng Configuration		
Paging Barge		10 🖸	0
Pagi	ng Priority Active	Disable ᅌ	
Multi	cast Paging Codec	G.711a ᅌ	During active call if incoming multicast
Multicast Liste	ning		than this value the call will be held and
Priotity	Listening Address 6		Li multicast page will be played.
1			
Home • V	oIP Settings • Multic	cast Paging	
Multicast Pa	ging		
Multicast Pagin	g Configuration		
Pagin	g Barge	10 ᅌ 🚱	
Paging Priority Active		Disable ᅌ	
Multic	cast Paging Codec	G.711a ᅌ	
Multicast Lister	ning		
Priotity	Listening Address 🥝	L	abel
1			
2		Listening add	Iress is the IP address and
3		for a page.	
4		example:224.	5.6.20:32000
-			
5			
6			
6 7			
6 7 8			
6 7 8 9			

3.3.6 ADVANCED SETTINGS

You can set NAT (Network Address Translation) traversal function on this page.

Home	 VoIP Settings 	Advanced Settings
Advand	ed Settings	
NAT Trav	/ersal	
	STUN	Off ◯ On
	STUN Server Address	
	STUN Server Port	3478 (1024~65534), default: 3478
		Apply Cancel

Advanced Setting

Field Name	Description
Enable	Enable or disable NAT
	(Network Address
	Translation) Traversal
	function. Default is disabled.
STUN Server	Set STUN server's IP
Address	address.
STUN Server	Set STUN server's port
Port	number.
Check Interval	Set check interval time. The
	unit is second.

3.4 QoS Settings (Quality of Service)/Virtual LAN (VLAN)

You can get your QoS Virtual LAN information from this page and configure voice and data VLANs.

Home	QoS Settings	QoS Settings	
QoS Se	ettings		
QoS Set	tings		
	Voice VLAN	💿 Off	On
	Voice VID (TAG)	136	(2 ~ 4094)
	User Priority	0 (0 ~ 7)
	Data VLAN	 Off 	 On (Note:LAN port will work in bridge mode)
	Data VID (TAG)	137	(2 ~ 4094)
	User Priority	0 (0 ~ 7)
	Voice QoS (Diff-Serv)	40	
	SIP QoS (Diff-Serv)	40	
		A	pply Cancel

QoS Setting

Field Name	Decription
Voice VLAN	Enable voice VLAN. Default is Off.
Voice VID	VLAN tagging values (2~4094)
Tag	available. Default is undefined
	number.
User Priority	Values (0 to 7) are available.
	Default is undefined.
Data VLAN	Enable data VLAN. Default is Off.
Data VID Tag	VLAN tagging values (2~4094)
	available. Default is undefined
	number.
User Priority	Values (0 to 7) are available.
	Default is undefined.
Voice Qos	Set DSCP value. Default is 40.
DiffServ	
SIP QoS	Set DSCP value. Default is 40.
DiffServ	

Regarding QoS and VLAN ID. In order to troubleshoot VLANs, you may use the QuickKeys from the dial pad of:

VL—**85# Show the VLAN ID.

VS—**87*<kp>*<vlan id>#.

Set the VLAN ID. Use value of 0 to turn off/disable VLAN. Example: * * 8 7 * 1 2 3 * 0 # will disable VLAN and should allow the phone to receive a

DHCP address from the local network segment. Any other valid number for a VLAN ID (2-4095) will set the VLAN ID to that number.

3.5 Provisioning

Provisioning is the methodology of getting the phone programmed with its necessary configuration file and/or upgrading firmware.

Home	Provisioning	Provisioning
Provis	ioning	
Provisio	ning Options	
	DHCP Options	🔿 Disable 💿 Enable
	Auto Redirection	🔿 Disable 💿 Enable
	MAC File	🔿 Disable 💿 Enable
	ConfigID	🔵 Disable 💿 Enable
	Firmware Update	🔵 Disable 💿 Enable
	Notify Reboot	Obisable NoAuth OAuth
	Request Timeout Restart	🔿 Disable 📀 Enable
Provisio	ning Server Settings	
	Server Type	Olisable Ottp Ontp Ontps
	Server URL	
	User Name	
	Password	
AutoUp	date Settings	
	ConfigID	
	ConfigID Update Time	0 1-24 hour of the day,0-Disable
	Firmware Update Time	0 1-24 hour of the day,0-Check on reboot
webUI N	Management	
	Configuration Version Nur	nber 3.1000 🥝
	Export Configuration	Export 📀
	Import Configuration	Browse No file selected. Import Now
	Firmware Version Number	CC1-3.0.0-040
	Import Firmware	Browse No file selected. Import Now
		Apply Cancel

3.5.1 PROVISIONING OPTIONS

Home	Provisioning	Provisioning			
Provis	ioning				
Provisio	ning Options				
	DHCP Options	Oisable	 Enable 		
	Auto Redirection	O Disable	 Enable 		
	MAC File	Oisable	 Enable 		
	ConfigID	Oisable	 Enable 		
	Firmware Update	O Disable	 Enable 		
	Notify Reboot	Oisable	NoAuth	Auth	
	Request Timeout Restart	Oisable	 Enable 		

Provisioning Options

Field Name	Decription
DHCP	DHCP Options (such as 66,
Options	60 and 43) will be checked in
	order to find a TFTP or other
	provisioning server.
Auto	The phone will contact
Redirection	https://provision.cetis.com to
	see if there is a provisioning
	server to be re-directed to for
	configuration file download.

Field Name	Decription
MAC File	Phone will request a
	configuration file of
	<macaddress>.cetis.cfg filetype.</macaddress>
	(It will automatically request its
	own internal MAC address.)
ConfigID	Phone will request a
	configuration file of
	<configid>.cetis.cfg filetype.</configid>
	This is often used by the
	installer to input the config file
	name for retrieval.
	NOTE: This can/should be
	disabled in your production
	config files if it is not used in
	order to avoid the "doodle-
	doodle" config prompt tone
	that indicates the phone needs
	to be programmed. This tone
	will sound after every reboot if
	left ON and there is not a name
	in the ConfigID field under
	AutoUpdate Settings. This could
	disturb guests.
Firmware	The phone will automatically
Update	check the provisioning server for
	a file named firmware.cetis.txt.
	If found, it will compare its
	existing model and firmware
	to the firmware files listed in
	the .txt file and upgrade or
	downgrade as directed.
	Example: File firmware.cetis.txt
	#Place all firmware filenames
	that are required for installation
	on separate lines. Example:
	CM1-3.0.0-016.bin
	CC2-3.0.0-016.bin
	CE2-3.0.0-016.bin
	CE1-3.0.0-016.bin
	CM1-3.0.0-016.bin
	CM2-3.0.0-018.bin
	CD2-3.0.0-016.bin

Field Name	Decription
Notify/	SIP employs NOTIFY methods
Reboot Auth	for things like Message Waiting
	Indication (MWI), but also can
	cause a SIP device to reboot.
	There is a setting to disable,
	require No Authentication, or
	require authentication before
	accepting the Notify. Require
	authentication does not affect
	NOTIFY used for voicemail.

3.5.2 PROVISIONING SERVER SETTINGS

In many cases the phone is informed which server to use via the DHCP proces or the redirect server, and as such is left disabled by default. However, the user can manually program the provisioning server types of TFTP, FTP, HTTP, or HTTPS instead. Only FTP requires User Name and Password.

Provisioning Server Settings	
Server Type	Object of the object of th
Server URL	
User Name	
Password	

3.5.3 AUTOUPDATE SETTINGS

Updating configurations and firmware can be programmed to occur during a particular hour of each day. The ConfigID field would be expressed as the number. **Example:** 3001.cetis.cfg would be expressed as 3001. The filetype and suffix of cetis.cfg are already presumed by the phone. NOTE: It is good practice to always have the ConfigID number field populated, as it will also serve to disable the "doodle-doodle" config prompt tone that indicates the phone needs to be programmed. This tone will sound after every reboot if left ON and could disturb guests.

AutoUpdate Settings ConfigID ConfigID Update Time Firmware Update Time

 3001

 0
 1-24 hour of the day,0-Disable

 0
 1-24 hour of the day,0-Check on reboot

3.5.4 WEBUI MANAGEMENT

In this section you may:

- View what configuration file version number is loaded on the phone.
- Export the configuration file that is loaded on the phone.
- Import a new configuration file version onto the phone.
- View what firmware version number is loaded on the phone.
- Import a new firmware version onto the phone.

webUI Management		
Configuration Version Number	3.1000 😯	
Export Configuration	Export 💡	
Import Configuration	Browse No file selected.	Import Now
Firmware Version Number	CD2-3.0.0-024	
Import Firmware	Browse No file selected.	Import Now
	Apply Cancel	

3.6 System Settings

The phone's system information (logging server, time settings, user management, system actions, and DECT settings (in case of cordless radio handsets) are set on these pages.

3.6.1 LOGGING SERVER

Configure the Logging Server on this page.

Home • System Settings	Logging Server
Logging Server	
Logging Information	
Logging Server	Off ◯On
Server Address	
Server Port	49494
Default Events	only CEvents plus periodic status
Interval	0 (30 ~ 300)
	Apply Cancel

Logging Server

Field Name	Description	
Logging Server	Enable or disable system log	
	function. Default is disabled.	
Server Address	Set system log server's IP	
	address or domain name.	
Server Port	Set system log server's	
	port number. Default port is	
	49494, but is User Definable.	

Field Name	Description
Events Only	Capture only significant
	events (e.g., Registration
	Lost or IP address change or
	Reboot requested).
Events Plus	Capture events as well as a
Periodic Status	periodic status (as defined
	in the Interval—Status
	update, e.g., Registered,
	Unregistered, Trying).
Interval	Interval from 30 seconds
	to 300 seconds to send
	information to the syslog
	server.

3.6.2 TIME SETTINGS

Time settings such as Dailight Savings Time and SNTP (Simple Network Time Protocol) servers are configured on this page.

Home	 System Settings 	Time Settings
Time Se	ettings	
Time Sett	ings Information	
	SNTP	Obisable 💽 Enable
:	Server Address	0.pool.ntp.org
	Time Zone	(GMT-07:00)Mountain Time(U.S. & Canada)
I	Polling Interval	21600 seconds (30 - 21600)
	Local Time	2011 : 01 : 01 00 : 00 (Year:Month:Day
	Local fille	Hour:Min)
I	Display time	Obisable 💽 Enable
	Time Format	12 Hour
Daylight S	Savings Settings	
1	Enable Daylight	Off ◯ On
	Time shift (minutes)	60 minutes (-1440 - 1440)
Daylight S	Savings Start Dates	
1	Month	March 🗘
	Week of Month	week 2 🗘
1	Day	Sunday 🗘
1	Hour	2
Daylight S	Savings Stop Dates	
	Month	November 🗘
	Week of Month	week 2 🗘
1	Day	Sunday 🗘
1	Hour	2
		Apply Cancel

Time Settings

SNTP (Simple Network Time Protocol)—	
Enabled by Defa	ult
Server Address	0.pool.ntp.org by default.
Time Zone	Select from GMT (Greenwich
	Median Time + or
Polling Interval	SNTP server polling interval
	in seconds.
Local Time	Manually configure time when
	SNTP is disabled.

Display Time	Enabled (by default) or
	Disabled (for phones with
	LCD screen only).
Time Format	12 hour or 24 hour (military)
	time display.
Daylight Saving	s Time
Enable DST	OFF by default.
Time Shift	Almost always 60 minutes.
DST Start Date	Set when DST should start.
DST Stop Date	Set when DST should stop

3.6.3 USER MANAGEMENT

Configure users' privileges and authentication on this page.

Home • System Settings •	User Management	
User Management		
Keypad Password		
Keypad Password	•••	Note: Please only input number.
Verify Password	•••	Because keypad only accept number.
User Management		
Administrator User ID	admin	Note:
Administrator Password	••••	Only administrator user can modify this account.
Verify Password	•••••	
Remote Administration		
		7
CetisAdmin User	admin	Note:
CetisAdmin Password	••••	Only administrator user can modify this account.
Verify Password	•••••	
	Apply Cance	
	Carice	

User Management

Keypad Passw	ord	
Keypad	Set the password of keypad.	
Password	Default is 123.	
Verify	Enter the new keypad	
Password	password again for verification.	
User Managen	nent	
Administrator	Set the username of	
User ID	administrator mode. Default is	
	"admin."	
Administrator	Set the password of	
Password	administrator mode. Default is	
	"admin."	
Verify	Enter the new password of	
Password	administrator mode again for	
	verification.	

Remote Admir	nistration
CetisAdmin	Set the username of
User	CetisAdmin account. Default is
	"admin."
CetisAdmin	Set the password of
Password	CetisAdmin account. Default is
	"admin."
Verify	Enter the new password
Password	of guest mode again for
	verification.

3.6.4 SYSTEM ACTIONS

Reset to factory default or reboot device is currently done on this System Actions page.

Home • System Settings • System	tem Actions
System Actions	
System Actions	
Reset to Factory Default	Reset
Reboot Device	Nebuot
System Actions	
Reset to Factory	Click Reset button to restore

Default	all the settings to factory
	default.
Reboot Device	Click Reboot button to
	reboot the phone.

3.6.5 DECT—DIGITAL ENHANCED CORDLESS TELECOMMUNICATIONS

DECT cordless technology is used in Cetis SIP phones and both Power levels and Country codes can be changed in the web UI and the configuration file. There is also a line sharing feature, allowing a second person to share the line from another cordless handset. This can be disabled entirely, set to enabled to toggle the primary handset, or enabled to exclude the secondary handset. Additionally, the FNC key on the handset can be programmed as Transfer, HOLD or MUTE.

Home • Cordless Settings		
Cordless Settings		
Base Settings		
Power Level	Level 3 📀	
Frequency	USA ᅌ	
Line Sharing Feature	Disable	٢
Programmable FNC Key	Transfer ᅌ	
	Apply Capo	cel

DECT Settings	
Power Level	Set the power level of the DECT signal. Default power level is 3. Weakest power level is 0 and strongest is 7.
Frequency	Each country has a different set of frequencies they allow within their spectrum. The drop-downs available set the allowable frequency codes for that country.
Line Sharing Feature	The line sharing feature, allows a second person to share the line from another cordless handset. This can be disabled entirely, for no line-sharing of handset or set to (Enabled—Toggle Itself) whereby the handset (itself) can enter or leave the call by pressing Line 1, or set to (Enabled—Cancel Other) to exclude the other handset when one handset presses Line 1, thus kicking the other handset off the call as a privacy mode. (Default mode is Disabled.)
Programmable FNC Key	The FNC key on the cordless handset can be set in this menu to act as transfer, hold, or mute on that handset.

4. Tech Notes

4.1 LLDP—Tech Notes

WHAT IS LLDP?

LLDP (Link Layer Discover Protocol) is a standardized protocol for advertising the identity and abilities of a device. It is useful for keeping inventory of connected devices. It can also be extended to advertise power requirements, VLAN information, etc., using LLDP-MED extensions.

Cetis phones can use LLDP information for VLAN provisioning, enabling the phone to be placed on the right network for configuration provisioning without manually configuring the phone.

HOW IS IT SET-UP?

Setting LLDP up is as simple as leaving the default settings in place on the Cetis phone. However, the POE switch must have LLDP turned on and be configured to use LLDP-MED for VLAN information for the phone to receive LLDP.

To change the interval LLDP packets are sent at, and to disable LLDP: The interval at which LLDP sends packets can be altered from 1–3600 seconds:

- 1. Log into phone's webUI.
- 2. Go to Network Settings > WAN Settings.
- 3. Under LLDP Settings
 - a. Enable/Disable LLDP.
 - b. Change Packet Interval to a value from 1–3600.
- 4. Apply settings at bottom.
- 5. Press reboot prompt and/or unplug phone.

LLDP	Enable ᅌ
Packet Interval	1
	Apply Cance

TROUBLESHOOTING

If the switch as been configured to advertise a voice VLAN, confirm the phone has configured itself by pressing **85# to hear/see the VLAN ID of the phone. If it is incorrect check your switch configuration. If it is correct, but the phone is not connecting then LLDP is not the issue, but IP connectivity. Check DHCP configuration.

4.2 802.1x—Tech Notes

WHAT IS 802.1X?

802.1x is an access control method for network devices. It helps protect the network from unauthorized devices connnecting to the network by first requiring them to authenticate. There are several methods that the 802.1x standard supports to authenticate; however, our phones only support md5 authentication.

PROCESS

The supplicant (Cetis phone) connects to the authenticator (POE switch) which challenges the supplicant for credentials. Once these credentials are acquired the authenticator sends them to the authentication server. The authentication server can then sends a success or failure message to the authenticator. Once the authenticator gets this response it either blocks the port or lets the device on the network. Afterwards VLAN configuration can be performed to place the phone on the right VLAN. This can be done by the switch, static phone configuration, or LLDP-MED.

HOW IS IT SET-UP?

Before 802.1x can be made to work, the authenticator (switch) and authentication server settings must be correct. Configuration of our phones to support 802.1x is very simple:

- 1. Log into phone's webUI.
- 2. Go to Network Settings > WAN Settings.

- 3. Under 802.1X Settings
 - a. Enable 802.1x.
 - b. Fill in User Name.
 - c. Fill in Password.
- 4. Apply settings at bottom.
- 5. Press reboot prompt and/or unplug phone and plug it into 802.1x switch.

802.1X Settings	,
802.1X	Enable ᅌ
User Name	
Password	Ø
Туре	multicast ᅌ

4.3 DHCP Options—Tech Notes WHAT ARE DHCP OPTIONS?

DHCP is known for IP address configuration; however, it can configure much more via options. These options can tell the endpoint provisioning servers, VLAN info, DNS info, etc.

Endpoints send the options they support when they make a DHCP request, and the DHCP server responds with the correct information (if it is configured on the DHCP server).

OPTIONS SUPPORTED

Cetis phones support many options that make configuration more easily done.

Option 60/43—This is a vendor specific option. The Cetis phone sends option 60 containing a vendor class identifier. The DHCP server responds with option 43, which contains a string with configuration parameters.

Option 66—Option that identifies the TFTP server.

Option 1, 3, 6, 12, 15, 28, 40, 41—Used to provide common network information

Option 132—Vendor specified (common usage for VLAN ID in VoIP). Used to provide a VLAN ID to the phone.

Option 133—Vendor-specified (common usage for VLAN DSCP in VoIP). Used to provide VLAN QOS priority information to the phone (values 1-7).

HOW IS IT SET-UP?

DHCP Options are automatically requested at default and when DHCP is selected to be used as Network Mode:

Basic Settings Network Mode OHCP Fixed PPPoE

Some DHCP options can be disabled by going to Provisioning and selecting Disable under Provisioning Settings:

Provisioning		
Provisioning Options		
DHCP Options	Disable	

Cetis phones will request options 60/43, 66, 43, 132, and 133 even with a static IP address (via DHCP Inform). To disable DHCP completely, you will need to use a static IP address and disable DHCP Options in Provisioning. This turns off DHCP Inform; however, DHCP Inform is useful for duplicate address detection/prevention if a DHCP server is used on the same network.

DHCP Options will take precedence over static settings for most provisioning options. However, VLAN settings will be initially the static value as the initial DHCP request will be made on this VLAN.

TROUBLESHOOTING

The first step is to see the state of the phone by pressing **47#. If the IP address heard is on the same scope as set up in the DHCP server then look into option misconfiguration on the DHCP server. The DHCP server could be encoding the options in a way that the phone does not understand.

If a different IP address is heard or no IP address, then several problems could be at work:

 Either no IP or wrong IP—The access port is configured to only accept tagged VLANs. To fix this you can use LLDP or **87*123*<vlanID># to place the phone on a VLAN that can get DHCP information.

- No IP—There is no DHCP server on the untagged network of the access port. Check DHCP configuration.
- No IP—VLAN configuration was correct but there is a DHCP server misconfiguration. Check that the phone has the right VLAN by pressing **85#.
- 4. Wrong address—The phone connnects to a DHCP scope, but the scope is on the untagged access network, and does not have the correct VLAN options configured to put the phone on the voice network. To fix this you can use LLDP, option 132, or statically with **87*123*<vlanID>.

4.4 QuickKey DialPad Shortcuts

A number of Quick Key commands have been implemented for ease of maintenance, administration and troubleshooting.

Each has a mnemonic which should make it easier to remember. In some cases, the command should be protected so the keypad password must be entered or the command will not be executed. In the descriptions below, the default keypad password <123> is represented as <kp>.

- 1. **47#, (** IP #) announces the phone's current IP address.
- 2. **39#, (** FW #) announces the phone's current software release number.
- 3. **85#, (** VL #) broadcasts the telephone current VLAN ID.
- 4. **83#, (** TF #) broadcasts the current TFTP server address.
- 5. **72#, (** RB #) reboots the phone.
- 6. **36#, (** DN #) broadcasts the current DN/extension number.
- 7. **37#, (**DS #) toggles Daylight Savings ON/OFF to increase time display by 1 hour.

- **33*password#, (** DE*123 #) clears the phone current configuration, resets to default settings, and reboots automatically.
- **77*password*config ID#, the phone downloads a new specified configuration file from the TFTP server. After downloading successfully, ignoring the config file version number, the phone will restart automatically.
- 10. **87*password*VLANID#, [** VS*123*newVLAN #] revises the phone's VLAN ID. After revising the VLAN ID successfully, it announces the new VLAN ID and restarts the phone. Example: Set the VLAN ID. Use value of 0 to turn off/disable VLAN. Example: * * 8 7 * 1 2 3 * 0 # will disable VLAN and should allow the phone to receive a DHCP address from the local network segment. Any other valid number for a VLAN ID (1-4095) will set the VLAN ID to that number.

11. **89*<keypad password>*<TFTP server IP
 address>*<ConfigID>#,
 Example: **89*<123>*<10 * 0 * 0 * 100>*

ConfigID>#,

The phone downloads the specified configuration file <ConfigID> from the TFTP server at specified IP address (10.0.0.100). After downloading successfully, the phone will apply the file and restart automatically.

Important Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1. Read and understand all instructions.
- 2. Follow all warnings and instructions marked on the product.
- 3. Unplug the product from the wall outlet before cleaning. Do not use liquid cleaner or aerosol cleaners. Use a damp cloth for cleaning.
- 4. Do not use this product near water—for example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
- 5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 6. Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or any other similar surface. This product should never be place near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
- 7. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 8. To reduce the risk of electric shock do not disassemble this product. Take it to a qualified service facility if service or repair work is required. Opening or removing covers may expose you to dangerous

voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.

- Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.

PLEASE SAVE THESE INSTRUCTIONS.

FCC Interference Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna for the radio or television that is receiving the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

FCC RF Radiation Exposure Statement

The installation of the base unit should allow at least 20 centimeters between the base and persons to be in compliance with FCC RF exposure guidelines. For body-worn operation, the portable part (handset) has been tested and meets FCC RF exposure guidelines.

This device must not be co-located or operating in conjunction with any other antenna or transmitter. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Industry of Canada Requirements

Note: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by a user to this equipment, or equipment malfunctions, may give the telephone communications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection, that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

Notice: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist

of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

REN: Z

For warranty and service in Canada, please contact:

Williams Telecommunications 5610 Kennedy Road Mississauga, Ontario, L4Z2A9 Canada Phone: 905-712-4242 Fax: 905-712-1754

Requirements of Part 15— FCC Rules

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Move the telephone away from the receiver.
- 2. Consult the dealer or an experienced radio/TV technician for help.

Any changes made by the user not approved by the manufacturer can void the user's authority to operate the telephone.

Requirements of Part 68— FCC Rules

This equipment complies with Part 68 of the FCC Rules and the requirements adopted by ACTA. On the bottom of this telephone is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company. The USOC Jack for this equipment is RJ11C.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by ACTA. A compliant telephone cord and modular plug are provided with this telephone. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The Ringer Equivalence Number (REN) is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is a part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

If this telephone causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact TeleMatrix at (800) 462-9446. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

There are no user-serviceable parts contained in this equipment.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission, or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This telephone is hearing aid compatible.

These telephone devices are intended for commercial use only, primarily in hotel guestrooms. They must be used with a PBX (private branch exchange), and are not intended to be connected directly to a PSTN line (public switched telephone network). There are no user-serviceable parts inside the equipment.

Technical Specifications DIMENSIONS

8.5" (w) x 6.75" (l) x 3.5" (h)

WEIGHT

With handset: 25.2 lbs.

User Guides

If additional User Guides are needed, please go to www.telematrix.net to download the PDF.

Service

When problems arise that cannot be resolved using this or related documents, please go to www.telematrix.net for information about customer support, technical support, warranty, and product returns.

Statement of Limited Warranty

TeleMatrix product warranty information is available at www.telematrix.net.



Toll Free: +1.800.462.9446 Tel: +1.719.638.8821

Email: info@telematrix.net www.telematrix.net